

Motor ISOTRA Basic Solar - Screen Blinds and Exterior Blinds	
Step 1 Turning the motor on Press the PROG button on the motor for 1 s. The motor emits a short beep. Press the button gently with a blunt object to avoid damaging the microswitch.	Turning the motor off Press the PROG button on the motor for more than 7 s. The motor emits a long beep.
	
Step 2 Pairing the remote control Hold for 1 s; the motor jerks briefly.	Select the channel and confirm with the up arrow (within 10 s); the motor confirms with a jerk.
	
Step 3 Changing the direction of rotation Hold the STOP button on the remote control until the motor jerks.	Confirm with the down arrow, the motor will confirm with a jerk.
    	 
Step 4 Setting the upper limit position Briefly press the LEARN (S1) button on the remote control, the motor jerks.	Move to the desired upper position and confirm with the LEARN (S1) button, the motor jerks.
    	 
Step 5 Setting the lower limit position Briefly press the LEARN (S1) button on the remote control, the motor jerks.	Move to the desired lower position and confirm with the LEARN (S1) button, the motor jerks.
    	 
Deleting limit positions and intermediate positions Move to the limit position you want to delete and hold the LEARN (S1) button for 7 s.	The motor jerks after 1 s and then after 6 s; the limit position has been deleted.
  	
Caution: When an intermediate position is set, the product will always stop at this position when moving both down and up!	
Copying a stored channel Select the desired channel and hold the STOP button for 5 s until the motor jerks.	Select a new channel and confirm with the up button; the motor confirms with a jerk.
    	 
Changing from step mode to continuous operation (and vice versa) Hold the STOP button for 5 s until the motor jerks.	Confirm with the STOP button; the motor confirms with a jerk.
    	 

	Changing the sensitivity to obstacles – 8 levels in total Hold the up and down buttons simultaneously until the motor jerks. 	Press the STOP button + up button simultaneously to gradually increase the sensitivity and STOP button + down button to decrease the sensitivity. To save, hold the STOP button for 2 s (the motor jerks). 
	Setting the preferred limit position Press UP/DOWN to move the blind to the desired preferred position.  Press the LEARN (S1) button (1 s) until the blind moves. Press the LEARN (S1) button again (1 s) until the blind moves. The preferred limit position has been set successfully. 	Adjusting the limit positions Move the blind to the limit position to be adjusted. Press the LEARN (S1) button (1 s) until the blind moves.  The blind moves to the new desired limit position. Press the LEARN (S1) button (1 s) until the blind moves. The limit positions have been adjusted successfully. 
	Deleting one programmed channel Hold the STOP button for 5 s until the motor jerks. 	On the respective channel, press the LEARN (S1) button for 1 s; the motor confirms with a jerk. 
	Deleting all remote controls Hold the STOP button for 5 s until the motor jerks. 	On the remote control, press and hold the LEARN (S1) button for 7 s until the motor jerks for the second time. 