


PLEATED INSECT SCREEN PS4 V

1. MEASUREMENT


1.1. Measurement into reveal

The width and the height of the hole clearance for inserting the screen are measured. Measurements are taken at three points, the lowest value is used.

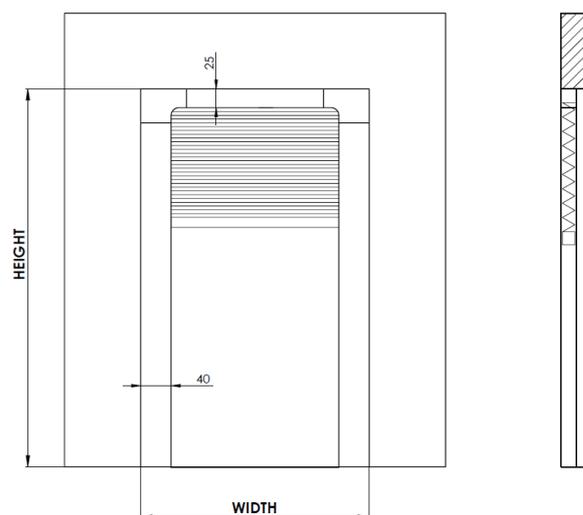

2.1. Measurement on the frame

Outside dimensions of insect screen are measured.

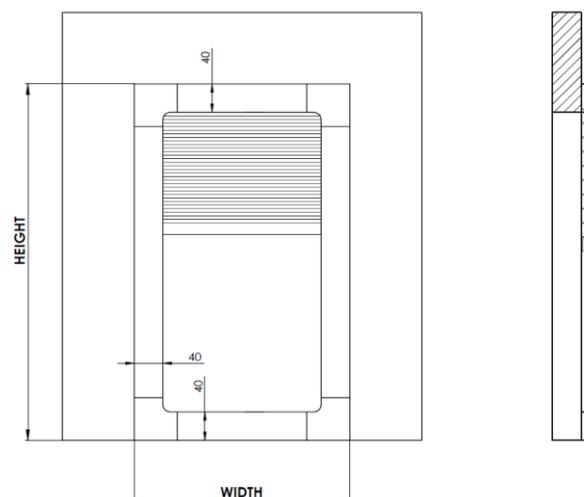


2. ASSEMBLY

2.1. ASSEMBLY INTO REVEAL


2.1.1. Installing the frames

Remove the backing paper from the double-sided adhesive tape and fix the side guiding profiles. Correct any out-of-square defects by sliding the plastic corner pieces.

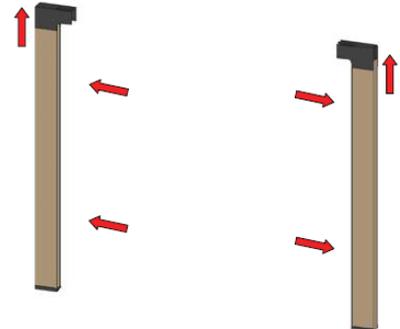


2.1.2. Mounting the upper profile start

Insert the upper profile start to the appropriate plastic corner parts. Drill holes for attachment of the upper profile (these holes should correspond with the holes in the profile). Fix it using the screws provided.

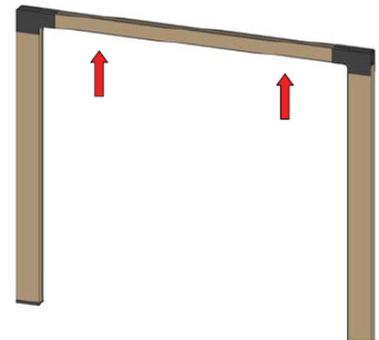


2.1.3. Insertion and fastening of insect screen KIT

Insert net packet KIT inside the profiles. Move net packet towards the side guiding start profile. Insert screen packet in the upper profile until it locks in place (to the stop).

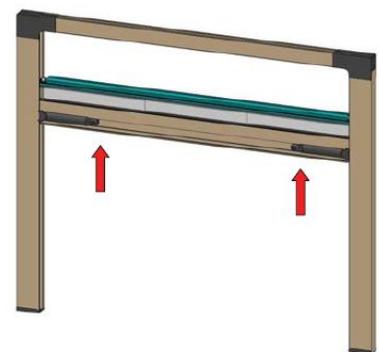


2.1.4. Inserting the cord stops

Insert the knot on the cords into the respective location on each cursor (black plastic part).

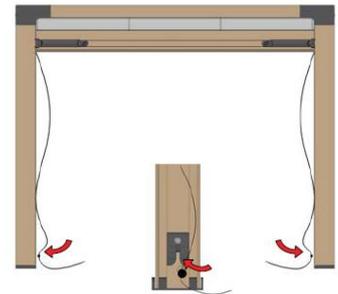


2.1.5. Cord adjustment

Using the key supplied, unscrew the screw on the cursors. Tighten the cords by sliding each cursor, and then tighten the screw. Cut excess cord length after having completed adjustment.

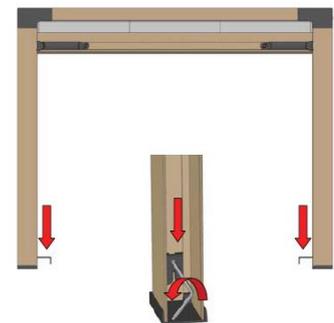


2.1.6. Plastic parts with spring

Insert plastic profile with spring of guides in the top profile KIT. Gently push the plastic part to the upper profile and tighten the screws. Plastic profile needs to elongate.

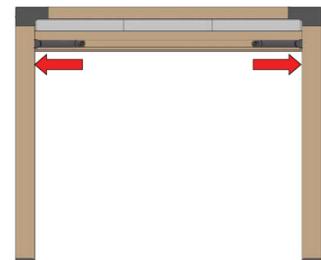


2.1.7. Inserting the rod

Insert the supplied rod until it snaps into place in the support profile.

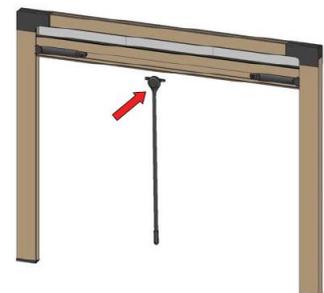


2.1.8. Testing the insect screen

Insert the guard to the bottom frame KIT for better guidance KIT in bottom profile.

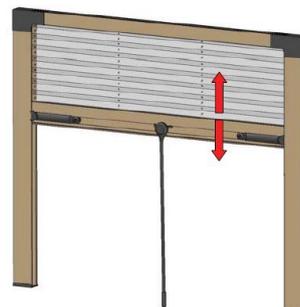

2.1.9. Disassembling (for cleaning)

Use the screw until the escaping of the screen pack.

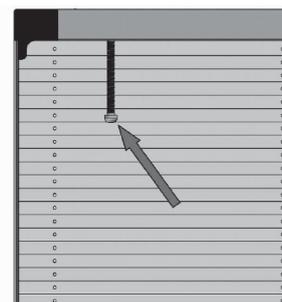

2.1. ASSEMBLY ON THE FRAME


2.2.1. Insert the bottom corner accessory on left „starting profile“.




2.2.2. Insert the top corner accessory on left „starting profile“.




2.2.3. Insert the upper track into the left top corner accessory.

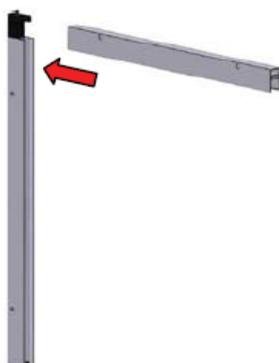


2.2.4. Insert the wire tensioner cursor into the upper guide.

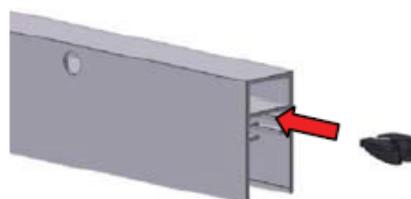

2.2.5. Insert the right top corner accessory into the upper guide.

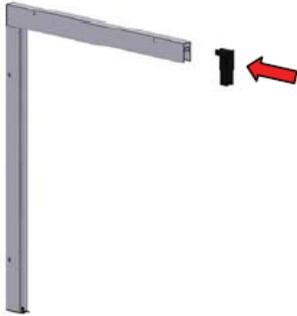


2.2.6. Insert the „arrival profile“ into the right top corner accessory.

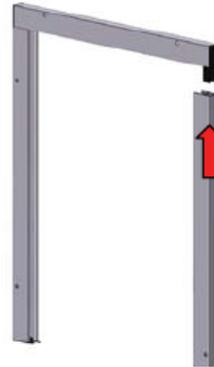


2.2.7. Insert the right bottom corner accessory on „arrival profile“.




2.2.8. Fix the frame keeping corners at 90°.

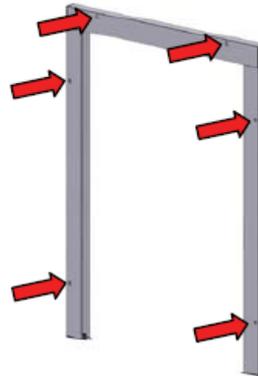


2.2.9. Fix on the floor the „bottom track“, using references on both bottom corners (accessories).

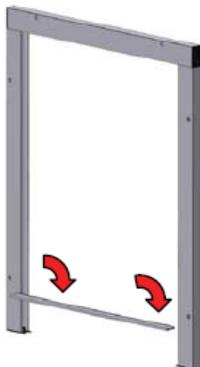


2.2.10. Insert and fix the screen kit.

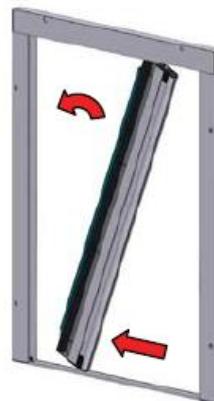


2.2.11. Insert the lower „wire locks“ accessory into its seat.

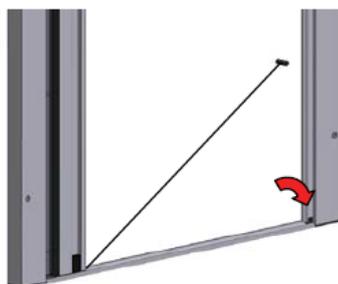


2.2.12. Insert the wires node into the wire tensioner cursor site and put in tension.

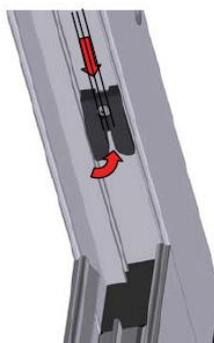

2.2.13. Test the polarity of the „magnet profile“ then fix it to the „arrival profile“.

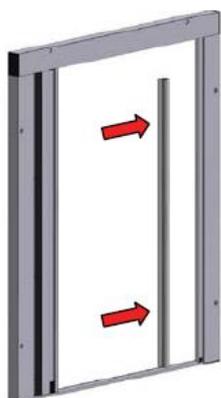

2.2.14. Open the insect screen.

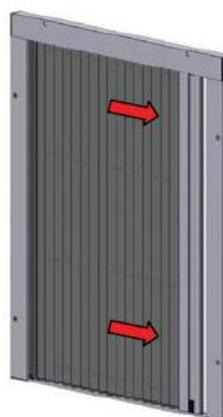

2.2.15. Insert the caps to cover the holes.

