

Fitting template for C3 tension shoes for the installation of Plissé VS1, VS2, VS3 SD, VS4, VS4S




Preparation:

Inserting the screw guide into the fitting template


Place the screw guide in the recess provided. Then fix it in place by screwing the enclosed screw from below through the fitting template into the screw guide.

ATTENTION: Pay attention to the required minimum glazing beading depth (23 mm)!


Distance between Plissé and glass pane:

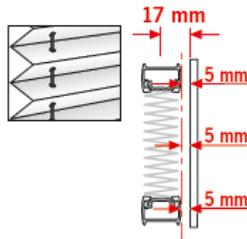

Distance between Plissé – honeycomb and glass pane:

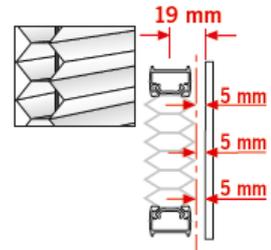

Fitting:

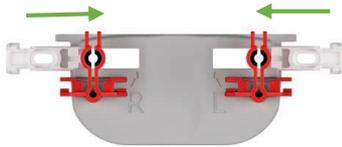

1 Push the lower parts of the tension shoe on the left and right into the recess on the side of the installation aid or press them in from below.



2 Then insert the screws into the screw guides.



3 By opening the clasp slightly, the screws will fall securely into the screw guide and can then be installed in this position overhead in the upper window rebate as well.

4 Fit the installation aid against the rebate as already described above, fix it firmly by hand and screw the screws into the window rebate using a cordless screwdriver. Make sure that you do not slip when screwing in the template.

Notes:

Do not tighten the screws all the way! There is a risk that you could overtighten the screw hole. For this reason, adjust the torque of the cordless screwdriver accordingly. Fully tighten the screw using a screwdriver. **Direct screwing is only possible with plastic windows!** For wooden and aluminium windows, mark the drilling position with the aid of the screw guide, pre-drill and then tighten the screw.



5 When the screw is firmly tightened, slide the fitting template down from the tension shoe to the centre of the window.

6 Now mount the already inserted tension shoe on the other side and then proceed in the same way with the upper tension shoes.